
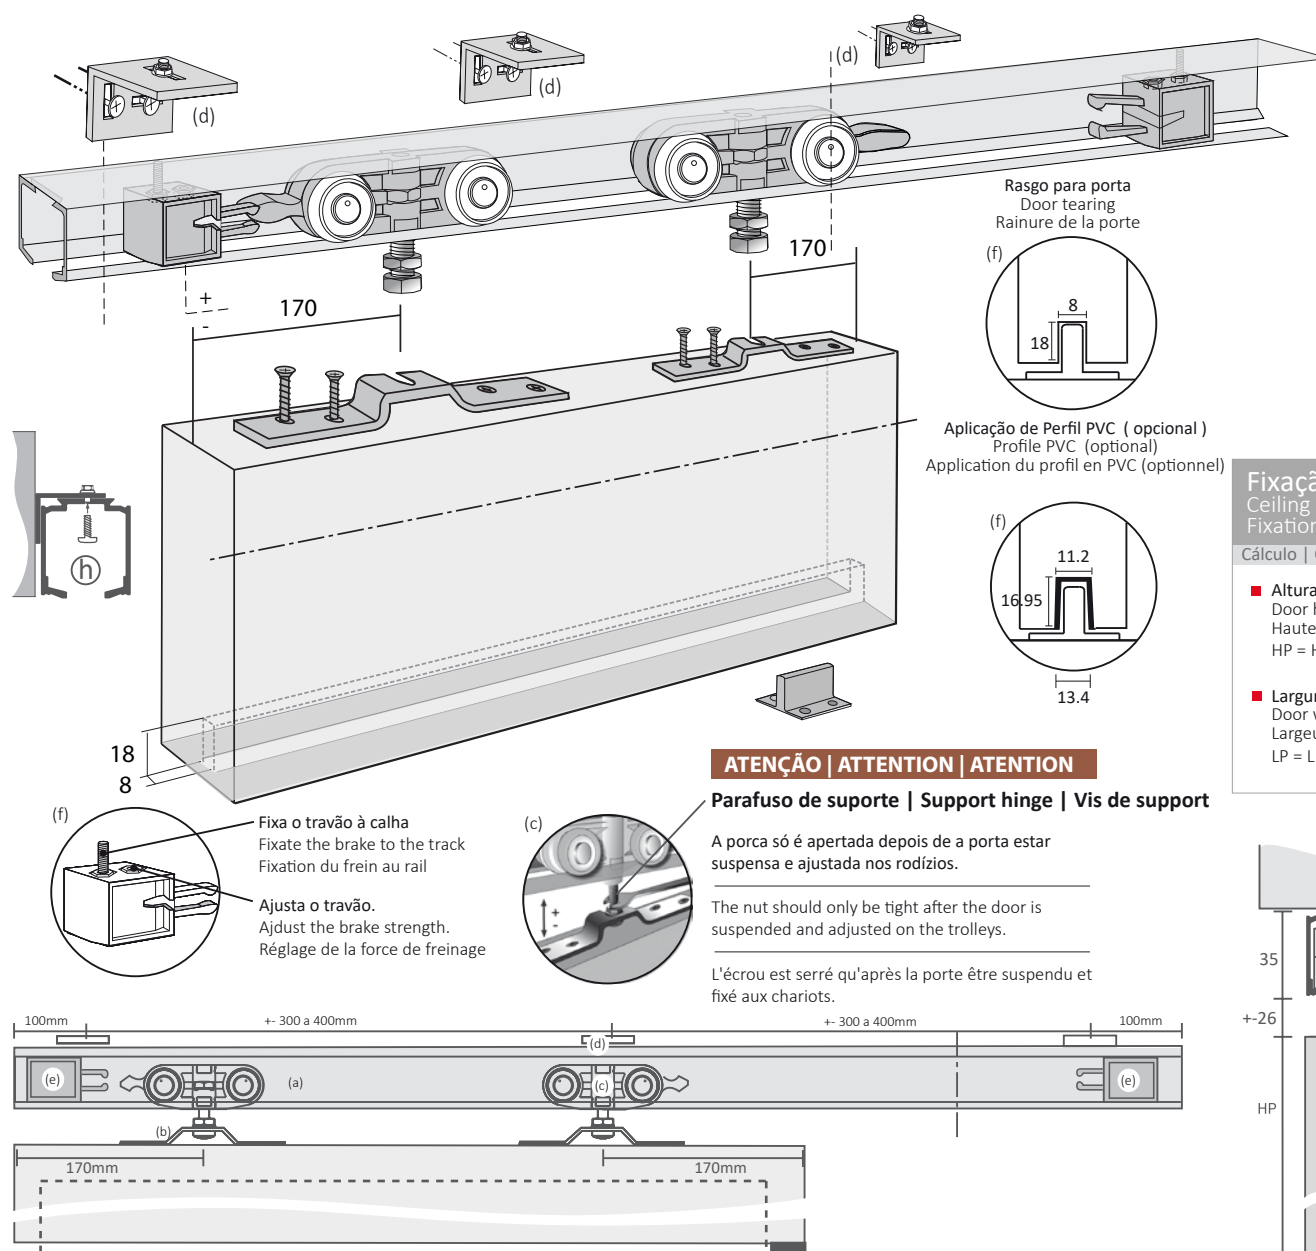


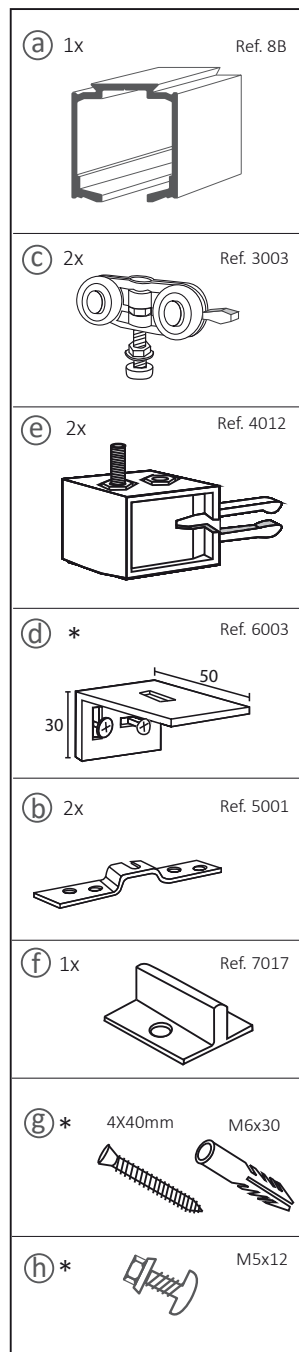

ATENÇÃO | ATTENTION | ATTENTION

Parafuso de suporte | Support hinge | Vis de support

A porca só é apertada depois de a porta estar suspensa e ajustada nos rodízios.


The nut should only be tight after the door is suspended and adjusted on the trolleys.

L'écrou est serré qu'après la porte être suspendu et fixé aux chariots.

Legenda:
H - Altura do vão | Opening height | Hauteur passage
HP - Altura da furação | Drilling height | Hauteur perçage

HP- Altura da porta | Door height | Hauteur porte
L- Largura do vão | Opening width | Largeur passage
LP- Largura da porta | Door width | Largeur de la porte

DESENHO TÉCNICO TECHNICAL DRAWING | DESSIN TECHNIQUE

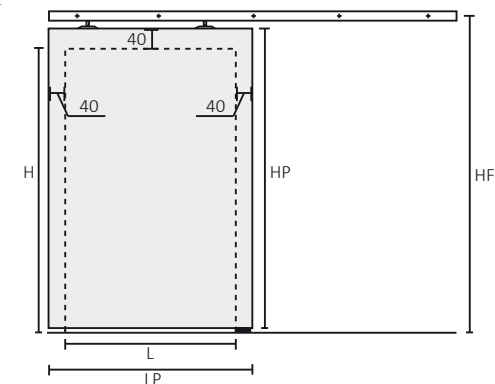

Fixação ao teto Ceiling fixation Fixation au plafond

Cálculo | Calculation | Calcul

- Altura da porta
Door height
Hauteur de la porte
 $HP = H - 66$
- Largura da porta
Door width
Largeur porte
 $LP = L + 80$

Fixação à parede Wall fixation Fixation au mur

Cálculo | Calculation | Calcul

- Furação | Drilling | Perçage
 $HF = H + 85$
- Altura da porta
Door height
Hauteur de la porte
 $HP = H + 35$
- Largura da porta
Door width
Largeur porte
 $LP = L + 80$

